




Cat 925 Connector BACK ENTRY

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords


STRIPPING DETAIL (FULL SIZE)

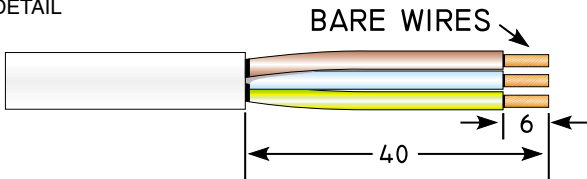

WIRING INSTRUCTIONS

Note: All wires are clamped between the moving nut and the fixed contact. **DO NOT** wrap wires under head of screw.

- 1 Strip insulation as illustrated and twist bare conductor strands.
- 2 Slide the connector cover over the flex.
- 3 Connect the Earth wire (Green/Yellow or Green) to the terminal marked 'E'.
- 4 Connect the Active (Live) wire (Brown or Red) to the terminal marked 'A'.
- 5 Connect the Neutral wire (Blue or Black) to the terminal marked 'N'.
- 6 Place the Earth wire into the slot as illustrated and tighten cord clamp around outer sheath of flexible cord.
NOTE: 5mm of sheath minimum must be beyond the end of the cord clamp.
- 7 Check the wires are in their correct position as illustrated and the terminal screws are tight.
- 8 Slide the connector cover into place and ensure the fixing screws are fully tightened.

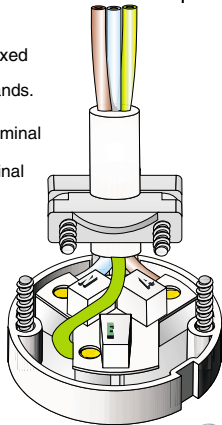

P D L

New Zealand Head Office: PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz



Electrical Products

PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre,
Baulkham Hills NSW 2153, Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61-29851 2666, Fax +61-29851 2695
www.pdl.com.au

