




628M Wiring Instructions. 75 Ohms Coaxial Cable TV Antenna Socket.


- 1 Snap 628M module to required plate.
- 2 Strip back outer casing 14mm from the end of the cable.
- 3 Roll braiding or foil back over casing and strip core insulation back 7mm from the end of the cable.
- 4 Loosen off core clamp and screen clamp and feed core wire under core clamp, then tighten both core wire and screen by their respective clamps.



14.0mm



7.0mm

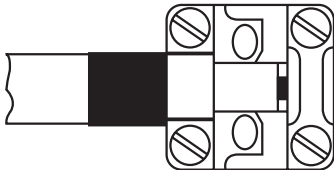

P D L

brand of
Schneider
Electric