




Cat 905 Plug

BACK ENTRY

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords


STRIPPING DETAIL (FULL SIZE)

BARE WIRES

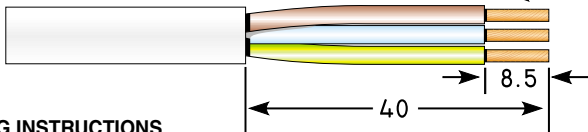

WIRING INSTRUCTIONS

1. Strip insulation as illustrated and twist bare conductor strands.
2. Slide the plug cover over the flex.
3. Connect the Earth wire (Green/Yellow or Green) to the terminal marked '⏚'.
4. Connect the Active (Live) wire (Brown or Red) to the terminal marked 'L'.
5. Connect the Neutral wire (Blue or Black) to the terminal marked 'N'.
6. Tighten cord clamp around outer sheath of flexible cord.
7. **Check the wires are in their correct position as illustrated and the terminal screws are tight.**
8. Slide the plug cover into place and ensure the fixing screws are fully tightened.

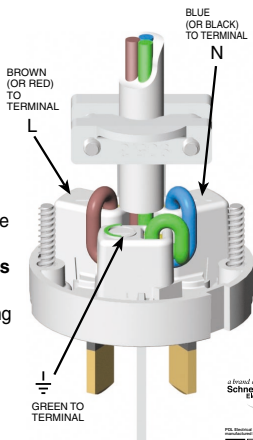

P D L

New Zealand Head Office: PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz



Electrical Products

PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre,
Baulkham Hills NSW 2153, Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61-29851 2666, Fax +61-29851 2695
www.pdl.com.au